



E61-433T17D User Manual

433MHz DIP Wireless Module



目录

1. OVERVIEW	2
1.1 INTRODUCTION	2
1.2 FEATURES	2
2. SPECIFICATION AND PARAMETER	3
2.1 LIMIT PARAMETER	3
2.2 OPERATING PARAMETER	3
3 SIZE AND PIN DEFINITION	4
4 CONNECT TO MCU	5
5 FUNCTION DESCRIPTION	5
5.2.1 Indication of UART output	6
5.2.2 Indication of wireless transmitting	6
5.2.3 Configuration procedure of module	7
5.6.4 Notes for AUX	7
6. OPERATING MODE	8
6.2NORMAL MODE (MODE 0)	9
6.3 RESERVE MODE (MODE 1)	9
6.4 COMMAND MODE (MODE 2)	9
6.5 SLEEP MODE (MODE 3)	10
7.INSTRUCTION FORMAT	10
7.1 DEFAULT PARAMETER	10
7.2 READING OPERATING PARAMETERS	10
7.3 READING VERSION NUMBER	11
7.4 PARAMETER SETTING INSTRUCTION	11
8. HARDWARE DESIGN	14
9 FAQ	15
9.1 COMMUNICATION RANGE IS TOO SHORT	15
9.2 MODULE IS EASY TO DAMAGE	15
9.3 BER(BIT ERROR RATE) IS HIGH	15
10. PRODUCTION GUIDANCE	15
11. E61 SERIES	16
12 ANTENNA RECOMMENDATION	16
13. PACKAGE FOR BATCH ORDER	17
REVISION HISTORY	18
ABOUT US	18

1. Overview

1.1 Introduction

E61-433T17D is a high-speed wireless transceiver module, operates at 425-450.5MHz (default: 433MHz), embedded with high-performance MCU and high-speed RF chip, transparent transmission is available, the transmitting power is 50mW.

The package length is unlimited when module works in serial transmission mode, which perfectly realizes continuous transmission for baud rate 57600/38400/19200/9600 and so on. Air data rate, FEC password etc. are configurable for user when module works in fixed-length transmission. Transmit data to other modules with configured air data rate in the most efficient way, which realizes low-latency and high-response. The high-speed feature of module is suitable for polling sampling, handshake response communication, and supporting Modbus protocol.

The data of the module transmitted over the air features randomness. With the rigorous encryption, data interception becomes pointless. There are 65536 configurable addresses for user to define, which makes only the module with matched password can receive the data.



1.2 Features

- Communication distance tested is up to 1km
- Maximum transmission power of 50W, software multi-level adjustable;
- Support the global license-free ISM 433MHz band;
- Support air data rate of 1.2kbps~70kbps;
- Low power consumption for battery supplied applications;
- Support 2.3V~5.0V power supply, power supply over 3.3 V can guarantee the best performance;
- Industrial grade standard design, support -40 ~ 85 °C for working over a long time;
- SMA access point, Easy connection of coaxial cable or external antenna

1.3 Application

- Home security alarm and remote keyless entry;
- Smart home and industrial sensors;
- Wireless alarm security system;
- Building automation solutions;
- Wireless industrial-grade remote control;
- Health care products;
- Advanced Meter Reading Architecture(AMI);
- Automotive industry applications.

2. Specification and parameter

2.1 Limit parameter

Main parameter	Performance		Remark
	Min.	Max.	
Power supply (V)	0	5.2	Voltage over 5.2V will cause permanent damage to module
Blocking power (dBm)	-	10	Chances of burn is slim when modules are used in short distance
Operating temperature (°C)	-40	85	-


2.2 Operating parameter

Main parameter		Performance			Remark
		Min	Typ.	Max.	
Operating voltage (V)		2.3	5.0	5.2	≥5.0 V ensures output power
Communication level (V)		-	3.3	-	For 5V TTL, it may be at risk of burning down
Operating temperature (°C)		-40	-	85	Industrial design
Operating frequency (MHz)		425	-	450.5	Support ISM band
Power consumption	Transmitting current [mA]	-	70	-	Instant power consumption
	Receiving current [mA]	-	19	-	-
	Turn-off current [μA]	-	5	-	Software is shut down
Max Tx power (dBm)		16.0	17.0	18.0	-
Receiving sensitivity (dBm)		-125	-126	-127	Air data rate is 1.2kbps
Air data rate (bps)		1.2k	1.2k	70k	Controlled via user's programming

Main parameter	Description	Remark
Distance for reference	1000m	Test condition: clear and open area, antenna gain: 5dBi, antenna height: 2.5m, air data rate: 1.2kbps
TX length	-	unlimited
Buffer	77 Byte	77 Byte capacity of single package
Modulation	LoRa™	-
Communication interface	UART	-
Package	DIP	-
Connector	2.54mm	-

Size	21 * 36mm	-
Antenna	SMA-K	50 ohm impedance


3 Size and pin definition

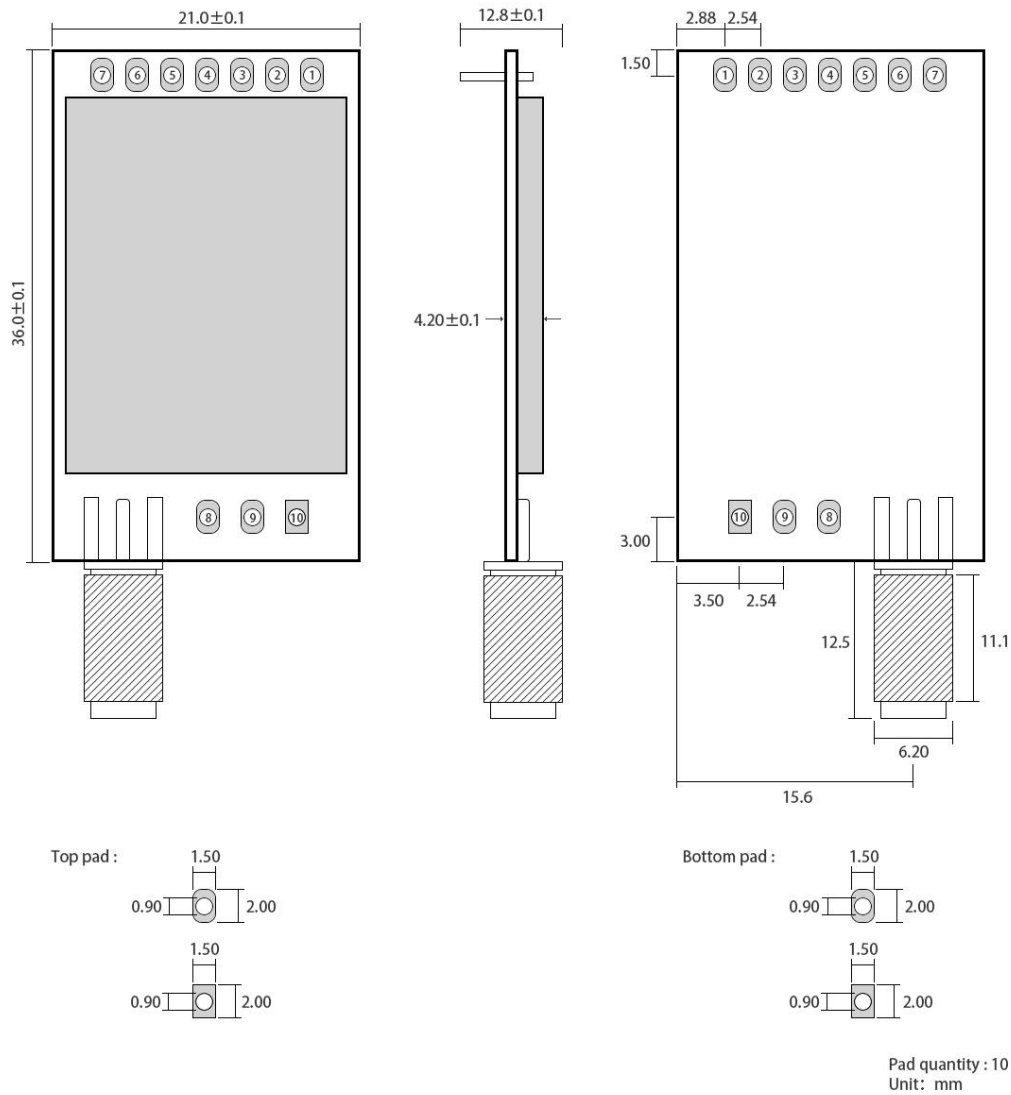

No.	Name	Direction	Function
1	M0	Input (weak pull-up)	Work with M1 to decide 4 working modes of module (not suspended, if not used, could be grounded).
2	M1	Input (weak pull-up)	Work with M0 to decide 4 working modes of module (not suspended, if not used, could be grounded).
3	RXD	Input	TTL UART inputs, connects to external (MCU, PC) TXD output pin. Can be configured as open-drain or pull-up input.
4	TXD	Output	TTL UART outputs, connects to external RXD (MCU, PC) input pin. Can

			be configured as open-drain or push-pull output
5	AUX	Output	To indicate module 's working status & wakes up the external MCU. During the procedure of self-check initialization, the pin outputs low level. Can be configured as push-pull output (suspending is allowed).
6	VCC	Input	Power supply : 2.3~ 5.2V DC
7	GND	Input	Ground
8	Fixed orifice	-	Fixed orifice
9	Fixed orifice	-	Fixed orifice
10	Fixed orifice	-	Fixed orifice

4 Connect to MCU

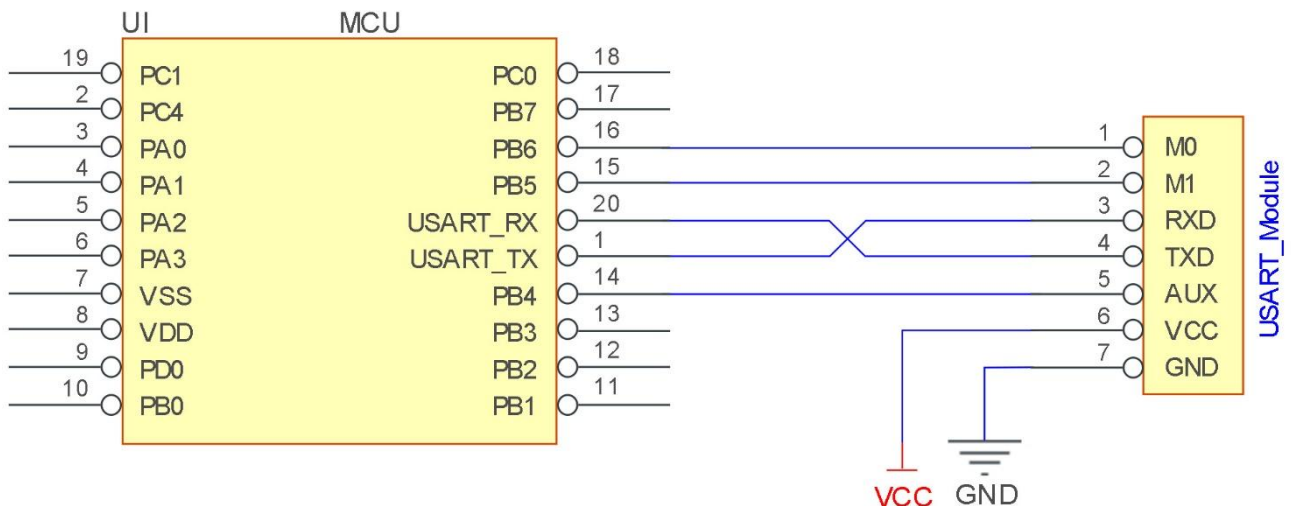

No.	Description (STM8L MCU)
1	The UART module is TTL level., please collect with MCU.
2	For some MCU works at 5VDC, it may need to add 4-10K pull-up resistor for the TXD & AUX pin.

5 Function description

5.1 Reset

When the module is powered, AUX outputs low level immediately, conducts hardware self-check and sets the


operating mode based on user's parameters. During the process, the AUX remains low level. After the process completed, the AUX outputs high level and starts to work as per the operating mode combined by M1 and M0. Therefore, users need to wait the AUX rising edge as the start of module's normal work.

5.2 AUX description

- AUX Pin can be used as indication for wireless send & receive buffer and self-check.
- It can indicate whether there are data that are not sent yet via wireless way, or whether all wireless data has been sent through UART, or whether the module is still in the process of self-check initialization.

5.2.1 Indication of UART output


- MCU
- To wake up external MCU

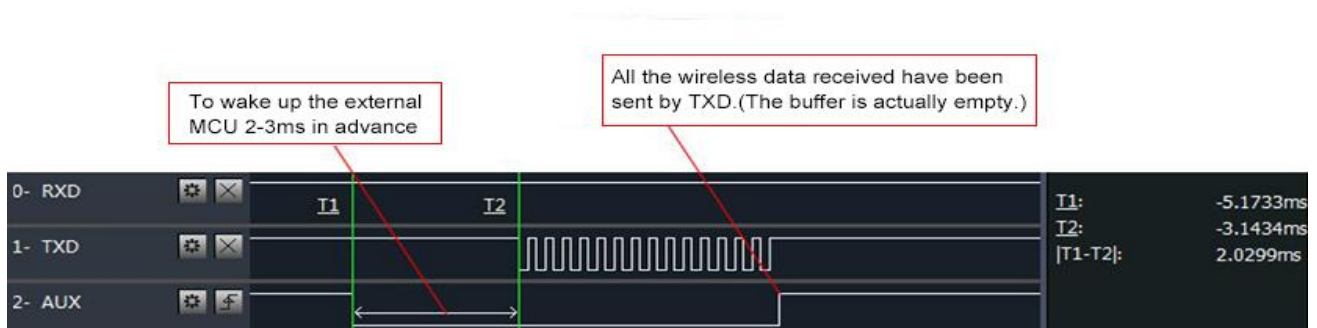

Timing Sequence Diagram of AUX when TXD pin transmits

5.2.2 Indication of wireless transmitting


- Buffer (empty): the internal 256 bytes data in the buffer are written to the RFIC (Auto sub-packaging).
- When AUX=1, the user can input data less than 256 bytes continuously without overflow. Buffer (not empty): when AUX=0, the internal 256 bytes data in the buffer have not been written to the RFIC completely. If the user starts to transmit data at this circumstance, it may cause overtime when the module is waiting for the user data, or transmitting wireless sub package.
- When AUX = 1, it does not mean that all the UART data of the module have been transmitted already, perhaps the last packet of data is still in transmission.

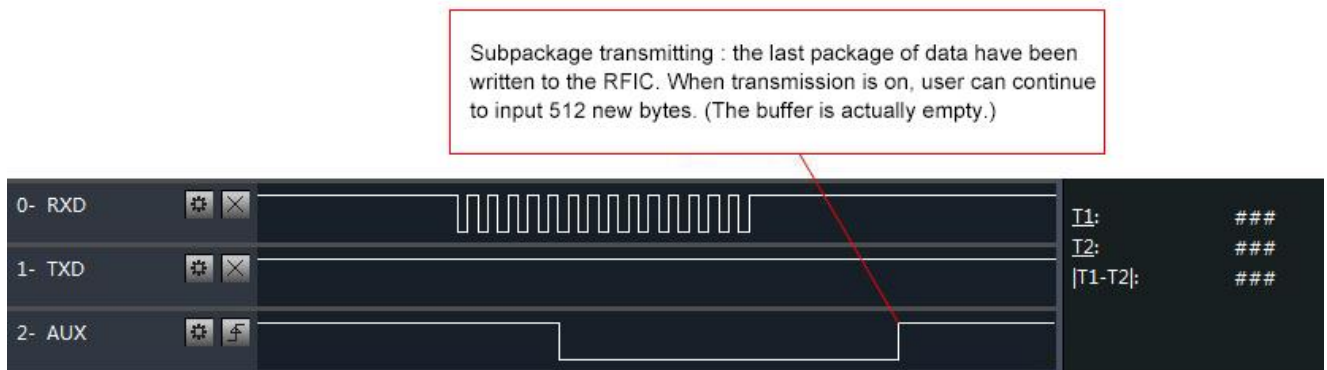

Timing Sequence Diagram of AUX when RXD pin receives

5.2.3 Configuration procedure of module

- Only happened when power-on resetting or exiting sleep mode

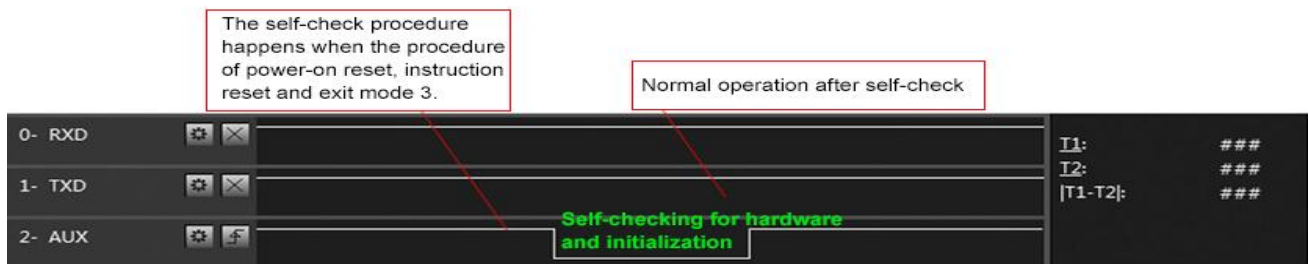

Timing Sequence Diagram of AUX when self-check

5.6.4 Notes for AUX

No.	Description
1	For function 1 & function 2 mentioned above, the priority should be given to the one with low level output, which means if it meets each of any low-Level output condition, AUX outputs low level, if none of the low-level condition is met, AUX outputs high level.
2	When AUX outputs low level, it means the module is busy & cannot conduct operating mode checking. Within 1ms since AUX outputs high level, the mode switch will be completed.
3	After switching to new operating mode, it will not work in the new mode immediately until AUX rising edge lasts for 2ms . If AUX stays on the high level, the operating mode switch can be affected immediately.
4	When the user switches to other operating modes from mode 3 (sleep mode) or it's still in reset process, the module will reset user parameters, during which AUX outputs low level.

6. Operating mode

Contents in below table are the introduction of input status of M1 & M0 and their corresponding mode:

Mode(0-3)	M1	M0	Mode introduction	Remark
Mode 0 Transmitting	0	0	UART and wireless channel are open, transparent transmission is on.	In this mode, module can be configured as serial transmission (default) and fixed-length transmission.
Mode 1 Reserve	0	1	Reserve	-
Mode 2 Command	1	0	UART is open, wireless channel is disabled, can be used for parameter-setting.	For parameter-setting
Mode 3 Sleep	1	1	The module goes to sleep, and the serial port and module are closed.	-

6.1 Mode switch

No.	Remarks
1	The user can decide the operating mode by the combination of M1 and M0. The two GPIO of MCU can be used to switch mode. After modifying M1 or M0, it will start to work in new mode 1 ms later if the module is free. If there are any serial data that are yet to finish wireless transmitting, it will start to work in new mode after the UART transmitting finished. After the module receives the wireless data & transmits the data through serial port, it will start to work in new mode after the transmitting finished. Therefore, the mode-switch is only valid when AUX outputs 1, otherwise it will delay.
2	For example, in mode 0 or mode 1, if the user inputs massive data consecutively and switches operating mode at the same time, the mode-switch operation is invalid. New mode checking can only be started after all the user's data process completed. It is recommended to check AUX pinout status and wait 2ms after AUX outputs high level before switching the mode.
3	If the module switches from other modes to stand-by mode, it will work in stand-by mode only after all the remained data process completed. The feature can be used to save power consumption. For example, when the transmitter works in mode 0, after the external MCU transmits data "12345", it can switch to sleep mode immediately without waiting the rising edge of the AUX pin, also the user's main MCU will go dormancy immediately. Then the module will transmit all the data through wireless transmission & go dormancy 1ms later automatically, which reduces MCU working time & save power.
4	Likewise, this feature can be used in any mode-switch. The module will start to work in new mode within 1ms after completing present mode task, which enables the user to omit the procedure of AUX inquiry and switch mode swiftly. For example, when switching from transmitting mode to receiving mode, the user MCU can go dormancy before mode-switch, using external interrupt function to get AUX change so that the mode-switch can be realized.
5	This operation is very flexible and efficient. It is totally designed on the basis of the user MCU's convenience, at the same time the work load and power consumption of the whole system has been reduced and the efficiency of whole system is largely improved.

6.2 Normal mode (mode 0)

When M1 = 0 & M0 = 0, module works in mode 0		
Serial transmission	Transmitting	<p>Air data rate will automatically match with configured baud rate(≤ 57600), which enables user to input data continuously, and module transmits data immediately once it receives user data.</p> <p>Unlimited package length for serial transmission.</p> <p>Transmission is available when baud rate set as 115200, but not serial transmission.</p> <p>So baud rate 115200 is not recommended for user when module works in serial transmission.</p> <p>AUX is the indication for module's working status, when module receives the first byte of user data, AUX output low level (busy for transmitting).</p> <p>After the module transmit all the data into RF chip & start transmission, AUX outputs high level.</p>
	Receiving	<p>After module receives data from transmitter, AUX outputs low level (busy for receiving), and starts to transmit data package from TXD after 5ms delay.</p> <p>After module transmits all the data from TXD, AUX outputs high level.</p> <p>UART baud rate must keep the same for both transmitter and receiver. When module receives data from transmitter, TXD can transmit data continuously without interspace between bytes.</p> <p>Serial transmission is suitable for low-latency occasion like Modbus.</p>
Fixed-length transmission	Transmitting	<p>UART baud rate, air data rate, address, FEC, password etc. are configurable for user, and the maximum packet length is 77 bytes.</p> <p>The principle module follows: all the data transmit from transmitter to receiver with the shortest time under the current air data rate.</p> <p>When the data package received by RXD is up to or more than 77 bytes, module starts to transmit data (data package is 77 bytes). The data more than 77-byte will be transmitted in the next package.</p> <p>When the required transmission bytes are less than 77 byte, module will wait 3-byte time and treat it as data termination unless continuous data inputted by user. Then module will transmit all the data through wireless channel.</p> <p>For example: if the required transmission byte is 1 byte, module will transmit the 1-byte package after wait 3-byte time. AUX is the indication for module's working status, when module receives the first byte of user data, AUX output low level (busy for transmitting).</p> <p>After the module transmit all the data into RF chip & start transmission, AUX outputs high level.</p> <p>Due to the 256 bytes buffer for transmission, so it is required that the data inputted by user is less than 256-byte one time. Next package can be inputted after AUX turns low level to high level.</p>
	Receiving	<p>After module receives data from transmitter, AUX outputs low level (busy for receiving), and starts to transmit data package from TXD after 5ms delay.</p> <p>After module transmits all the data from TXD, AUX outputs high level.</p>

6.3 Reserve mode (Mode 1)

When M1 = 0 & M0 = 1, module works in mode 1.	
Remarks	UART and wireless channel are disabled.

6.4 Command mode (Mode 2)

When M1 = 1 & M0 = 0, module works in mode 2.	
Transmitting	N/A
Receiving	N/A
Remarks	In this mode, UART baud rate is fixed as 9600 8N1, module can receive command for parameter-setting.

6.5 Sleep mode (Mode 3)

	When M1=1,M0=1,module works in mode 3
Transmitting	N/A
Receiving	N/A
Notes	The wireless receiver is closed and the MCU is in a sleep state, when the power consumption of the whole machine is about 4 uA

7.Instruction format

In command mode (mode 2: M1=1, M0=0) , it supports below instructions on list.

Only support 9600 and 8N1 format when setting

No.	Instruction format	Illustration
1	C0 + working parameters	C0 + 5 bytes working parameters are sent in hexadecimal format. 6 bytes in total and must be send in succession. (Save the parameters when power-down)
2	C1 C1 C1	Three C1 are sent in hexadecimal format. The module returns the saved parameters and must be send in succession.
3	C2 + working parameters	C2 + 5 bytes working parameters are sent in hexadecimal format. 6 bytes in total and must be send in succession. (Do not save the parameters when power-down)
4	C3 C3 C3	Three C3 are sent in hexadecimal format. The module returns the version information and they must be send in succession.
5	C4 C4 C4	Three C4 are sent in hexadecimal format. The module will reset one time and they must be send in succession.

7.1 Default parameter

	Default parameter values: C0 00 00 18 50 50						
Model	Frequency	Address	Channel	launch mode	Baud rate	Parity	Transmitting power
E61-433T17D	433MHz	0x0000	0x50	continuous transmission	9600	8N1	50W

7.2 Reading operating parameters

Instruction format	Description
C1+C1+C1	In sleep mode (M0=1, M1=1) , User gives the module instruction (HEX format): C1 C1 C1, Module returns the present configuration parameters. For example, C2 00 00 18 50 50.

7.3 Reading version number

Instruction format	Description
C3+C3+C3	In command mode (M0=0, M1=1) , User gives the module instruction (HEX format): C3 C3 C3, Module returns its present version number, for example C3 61 xx yy. 61 here means the module model (E61 series); xx is the version number and yy refers to the other module features.

7.4 Parameter setting instruction

No.	Item	Description	Remark
0	HEAD	Fix 0xC0 or 0xC2, it means this frame data is control command	Must be 0xC0 or 0xC2 C0: Save the parameters when power-down C2: Do not save the parameters when power-down
1	ADDH	High address byte of module (the default 00H)	00H-FFH Module address jointly determined by ADDH and ADDL, constitute a 16bit number. Only the module with same addresses can communicate with each other. When ADDH=FFH, ADDL=FFH, broadcast and monitor are available: 1. Module can transmit data to other modules with different addresses when works as transmitter. 2. Module can monitor data package from other modules with different addresses when works as receiver.
2	ADDL	Low address byte of module (the default 00H)	00H-FFH
3	SPED	Rate parameter, including UART baud rate and air data rate 7, 6 UART parity bit 00: 8N1 (default) 01: 8O1 10: 8E1 11: 8N1 (equal to 00) ----- 5, 4, 3 TTL UART baud rate (bps) 000: 1200bps 001: 2400bps 010: 4800bps 011: 9600bps (default) 100: 19200bps 101: 38400bps 110: 57600bps	<ul style="list-style-type: none"> UART mode can be different between communication parties <hr/> <ul style="list-style-type: none"> UART baud rate can be different between communication parties. The higher UART baud rate, the shorter communication distance. UART baud rate can be different between both two parties when module works in fixed-length transmission. The UART baud rate has nothing to do with wireless transmission parameters & won't affect the wireless transmit / receive features. <hr/> <ul style="list-style-type: none"> Air data rate setting is invalid when the module works

		111: 115200bps ----- 2, 1, 0 Air data rate (bps) 000: 1.2Kbps 001: 2.4Kbps 010: 4.8Kbps 011: 9.6Kbps 100: 19.2Kbps 101: 38.4Kbps 110: 50Kbps 111: 70Kbps	at serial transmission mode. Module will match with it automatically on the basis of UART baud rate. ● The air data rate must keep the same for both communication parties work in fixed transmission mode. The lower the air data rate, the longer the transmitting distance, better anti-interference performance and longer transmitting time
4	CHAN	Communication frequency (425M + CHAN * 0.1M (default 50H : 433MHz)	● 00H-FFH, for 425-450.5MHz.

5	OPTION	<div>7, FEC switch 0: Turn off FEC (Default) 1: Turn on FEC</div> <div>-----</div> <div>6 IO drive mode(the default 1) 1: TXD and AUX push-pull outputs, RXD pull-up inputs 0: TXD、AUX open-collector outputs, RXD open-collector inputs</div> <div>-----</div> <div>5, 4, 3 wireless wake-up time (for the receiver, it means the monitor interval time ,while for the transmitter it means continuously sending preamble code time.) 000: Fixed-length transmission 001: Reserved, equal to mode 0 010: Serial transmission 011: Reserved, equal to mode 0 100: Reserved, equal to mode 0 101: Reserved, equal to mode 0 110: Reserved, equal to mode 0 111: Reserved, equal to mode 0</div> <div>-----</div> <div>2, Whether to enable cipher 1: Enable 1: Not enable (Default)</div> <div>-----</div> <div>1, 0 transmission power (approximation) 00: 17dBm (Default) 01: 14dBm 10: 10dBm 11: 7dBm</div>	<div>● When FEC turns on, the data transmitting time will be extended while greatly improved the probability of successful sending and receiving data. User can enable this function if your application do not need low-latency transaction.</div> <div>-----</div> <div>● This bit is used to the module internal pull-up resistor. It also increases the level’s adaptability in case of open drain. But in some cases, it may need external 4-10KΩ pull-up resistor.</div> <div>-----</div> <div>● See more details in other chapters.</div> <div>-----</div> <div>● For user to define.</div> <div>● Both communication parties must keep on the same pages about this function.</div> <div>-----</div> <div>● The external power must make sure the ability of current output more than 1A and ensure the power supply ripple within 100mV. Low power transmission is not recommended due to its low power supply efficiency.</div>										
<div>For example: The meaning of No.3 "SPED" byte</div> <table><tr><td>The binary bit of the byte</td><td>7</td><td>6</td><td>5</td><td>4</td><td>3</td><td>2</td><td>1</td><td>0</td></tr></table>					The binary bit of the byte	7	6	5	4	3	2	1	0
The binary bit of the byte	7	6	5	4	3	2	1	0					

The specific value(user configures)	0	0	0	1	1	0	1	0
Meaning	UART parity bit 8N1		UART baud rate is 9600			Air date rate is 1.2k		
Corresponding hexadecimal	1				8			

8. Hardware design

- It is recommended to use a DC stabilized power supply. The power supply ripple factor is as small as possible, and the module needs to be reliably grounded.;
- Please pay attention to the correct connection of the positive and negative poles of the power supply. Reverse connection may cause permanent damage to the module;
- Please check the power supply to ensure it is within the recommended voltage otherwise when it exceeds the maximum value the module will be permanently damaged;
- Please check the stability of the power supply, the voltage can not be fluctuated frequently;
- When designing the power supply circuit for the module, it is often recommended to reserve more than 30% of the margin, so the whole machine is beneficial for long-term stable operation.;
- The module should be as far away as possible from the power supply, transformers, high-frequency wiring and other parts with large electromagnetic interference.;
- High-frequency digital routing, high-frequency analog routing, and power routing must be avoided under the module. If it is necessary to pass through the module, assume that the module is soldered to the Top Layer, and the copper is spread on the Top Layer of the module contact part(well grounded), it must be close to the digital part of the module and routed in the Bottom Layer;
- Assuming the module is soldered or placed over the Top Layer, it is wrong to randomly route over the Bottom Layer or other layers, which will affect the module's spurs and receiving sensitivity to varying degrees;
- It is assumed that there are devices with large electromagnetic interference around the module that will greatly affect the performance. It is recommended to keep them away from the module according to the strength of the interference. If necessary, appropriate isolation and shielding can be done;
- Assume that there are traces with large electromagnetic interference (high-frequency digital, high-frequency analog, power traces) around the module that will greatly affect the performance of the module. It is recommended to stay away from the module according to the strength of the interference.If necessary, appropriate isolation and shielding can be done.
- If the communication line uses a 5V level, a 1k-5.1k resistor must be connected in series (not recommended, there is still a risk of damage);
- Try to stay away from some physical layers such as TTL protocol at 2.4GHz , for example: USB3.0;
- The mounting structure of antenna has a great influence on the performance of the module. It is necessary to ensure that the antenna is exposed, preferably vertically upward. When the module is mounted inside the case, use a good antenna extension cable to extend the antenna to the outside;
- The antenna must not be installed inside the metal case, which will cause the transmission distance to be greatly weakened.

9 FAQ

9.1 Communication range is too short

- The communication distance will be affected when obstacle exists.
- Data lose rate will be affected by temperature, humidity and co-channel interference.
- The ground will absorb and reflect wireless radio wave, so the performance will be poor when testing near ground.
- Sea water has great ability in absorbing wireless radio wave, so performance will be poor when testing near the sea.
- The signal will be affected when the antenna is near metal object or put in a metal case.
- Power register was set incorrectly, air data rate is set as too high (the higher the air data rate, the shorter the distance).
- The power supply low voltage under room temperature is lower than 2.5V, the lower the voltage, the lower the transmitting power.
- Due to antenna quality or poor matching between antenna and module.

9.2 Module is easy to damage

- Please check the power supply source, ensure it is 2.0V~3.6V, voltage higher than 3.6V will damage the module.
- Please check the stability of power source, the voltage cannot fluctuate too much.
- Please make sure antistatic measure are taken when installing and using, high frequency devices have electrostatic susceptibility.
- Please ensure the humidity is within limited range, some parts are sensitive to humidity.
- Please avoid using modules under too high or too low temperature.

9.3 BER(Bit Error Rate) is high

- There are co-channel signal interference nearby, please be away from interference sources or modify frequency and channel to avoid interference;
- Poor power supply may cause messy code. Make sure that the power supply is reliable.
- The extension line and feeder quality are poor or too long, so the bit error rate is high;

10. Production guidance

This type is DIP module, when the welder welds the module, he must be welding according to the anti-static regulation. This product is allergic to static, randomly welding the module will have the chance of damaging it permanently.

11. E61 Series


Model No.	Frequency Hz	Tx power dBm	Distance km	Data Rate	Package	Size mm	Interface
E61-433T30D	433M	30	2.5	1.2k~70k	DIP	24 * 43	SMA-K
E61-433T17D	433M	17	1	1.2k~70k	DIP	21 * 36	SMA-K

12 Antenna recommendation

The antenna is an important role in the communication process. A good antenna can largely improve the communication system. Therefore, we recommend some antennas for wireless modules with excellent performance and reasonable price.

Model No.	Type	Frequency Hz	Interface	Gain dBi	Height	Cable	Function feature
TX433-NP-4310	Soft PCB antenna	433M	SMA-J	2	43.8*9.5mm	-	Built-in flexibility,FPC soft antenna
TX433-JW-5	Rubber antenna	433M	SMA-J	2	50mm	-	Flexible & omnidirectional
TX433-JWG-7	Rubber antenna	433M	SMA-J	2.5	75mm	-	Flexible & omnidirectional
TX433-JK-20	Rubber antenna	433M	SMA-J	3	210mm	-	Flexible & omnidirectional
TX433-JK-11	Rubber antenna	433M	SMA-J	2.5	110mm	-	Flexible & omnidirectional
TX433-XP-200	Sucker antenna	433M	SMA-J	4	19cm	200cm	Sucker antenna, High gain
TX433-XP-100	Sucker antenna	433M	SMA-J	3.5	18.5cm	100cm	Sucker antenna, High gain
TX433-XP-300	Sucker antenna	433M	SMA-J	6	96.5cm	300cm	Car carrying Sucker antenna, High gain
TX433-JZG-6	Rubber antenna	433M	SMA-J	2.5	52mm	-	Short straight & omnidirectional
TX433-JZ-5	Rubber antenna	433M	SMA-J	2	52mm	-	Short straight & omnidirectional
TX490-XP-100	Sucker antenna	490M	SMA-J	50	12cm	100cm	Sucker antenna, High gain
TX490-JZ-5	Rubber antenna	490M	SMA-J	50	50mm	-	Short straight & omnidirectional

13. Package for batch order

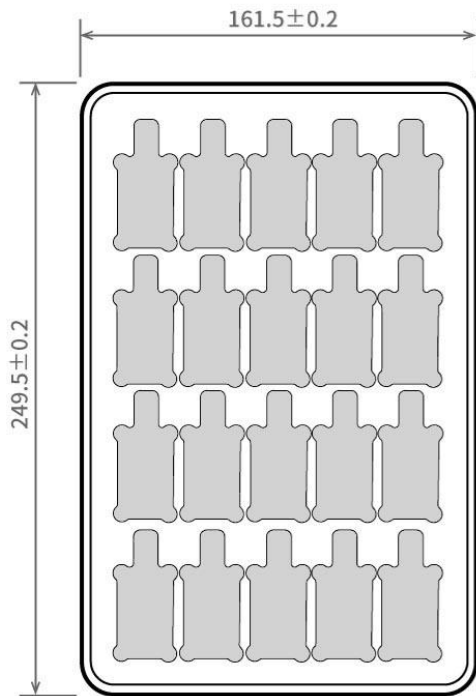

Unit: mm
 Each Layer: 20 pcs
 Each Package: 5 layers

Revision history

version	Date	Description	Issued by
1.00	2017/12/13	Initial version	huaa
1.10	2018/01/30	module name change	huaa
1.20	2018/10/25	version updating	huaa
1.30	2020-7-9	Bug fixes	Li
1.4	2022-8-24	Bug fixes	Yan

About us

Technical support: support@cdebyte.com

Documents and RF Setting download link: <https://www.cdebyte.com>

Thank you for using Ebyte products! Please contact us with any questions or suggestions: info@cdebyte.com

Fax: 028-64146160 ext. 821

Web: <https://www.cdebyte.com>

Address: Innovation Center D347, 4# XI-XIN Road, Chengdu, Sichuan, China



Chengdu Ebyte Electronic Technology Co.,Ltd.